


(1) Glass (NAP-123)

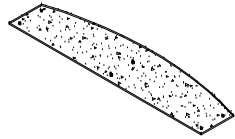

1PC

(V) Standoff
Pillars



6PCS

(O) Standoff
Caps




6PCS

(E9) Wood
Screw




6PCS+1


STEP 1 Locate glass top in position on the existing transaction counter. Make pilot holes for (E9) wood screws.

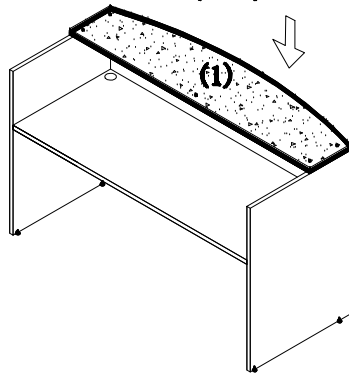


STEP 2 Remove glass top. Attach Standoff Pillars with (E9) wood screws.

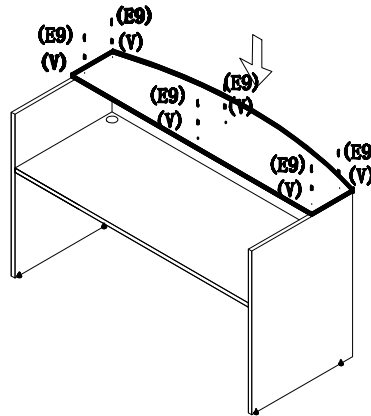

STEP 3 Place glass top on Standoff Pillars. Add Standoff Caps.

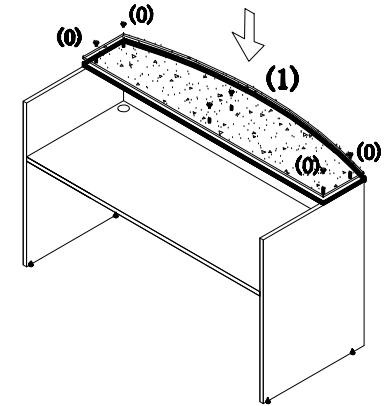

STEP 4

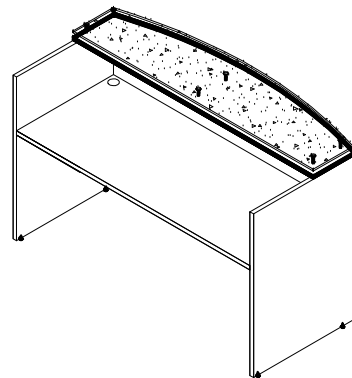

NAP-122' SON-122' KEN-122

GLASS TOP FOR NAP-122, SON-122, KEN-122

NAP-123

72"W*18"D*0.5"H



877-OSP-WORX
(677-9679)

*Always lay components on A clean,
soft-cushioned surface during assembly.*